


INSTALLATION INSTRUCTIONS

ALPHA SHOWER CUBICLE

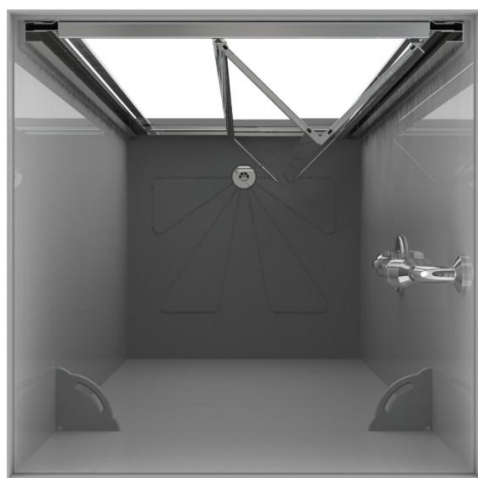


PLEASE READ CAREFULLY BEFORE INSTALLING CUBICLE

- The unit is delivered fully assembled in a protective cardboard sleeve
- Approximate weight of unit without door is 45kg, with door 60kg.
- No sealant should be used with polypropylene unless stated otherwise.
- Enough access should be allowed for moving unit into position and tipping unit upright.
- All shower fittings, lights and extraction should be installed using the relevant manufacturer's instructions.
- Cubicle arrives with a protective film. Where this may become entrapped during installation, localised removal will prevent unsightly traces of film on completion. Please take care not to scratch the internal surfaces.
- If other access holes below the level of the tray are required or enlarging existing holes, care must be taken not to damage the tray welds, especially at the corners, which could cause the cubicle to leak. Any large cut outs will undermine the integral strength of the unit, affecting its performance and invalidating any guarantees.

INSTALLATION

1. Remove the cardboard sleeve. Tear off a section and place in the cubicle as protection for the shower tray during installation.
2. Offer the cubicle into the location. If the floor is uneven it may be necessary to insert permanently fixed packing pieces under the unit to level the cubicle.
3. Complete plumbing. See base detail.

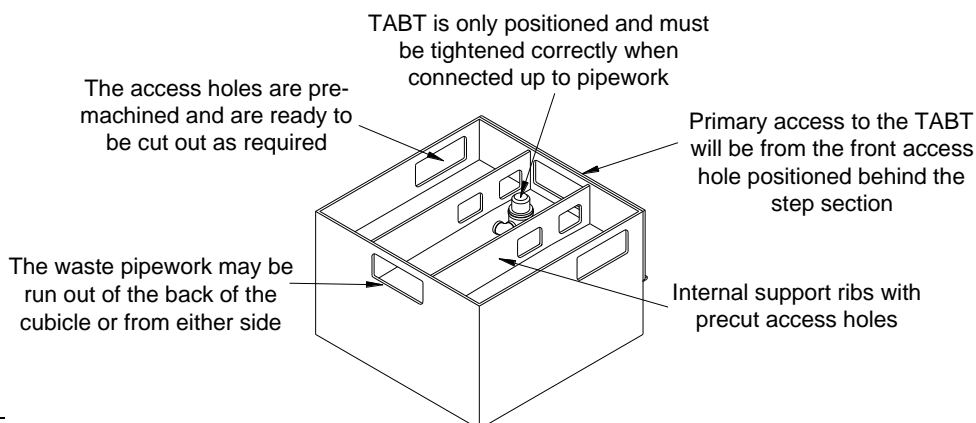

INSTALLATION INSTRUCTIONS

ALPHA SHOWER CUBICLE



4. Secure unit in position. The shower cubicle is not structurally dependent on the building, however anchorage is recommended to protect the plumbing and stabilise for rough usage. Right angled brackets or batons may be used to fix the unit from the base section to the floor. Ensure that all screws are at least 25mm below the level of the cubicle floor. Cubicle may be screwed through flange above roof panel to a batten firmly secured to the building.
5. Fit door if required. Refer to the relevant instructions supplied to install door.
6. Remove any protective film. Refer to cleaning instructions supplied to remove any marks.
7. Fit cover caps. All exposed screw holes are to be covered.

8. If the product is supplied with a mixer console, please refer to local regulations with regards to the Legionella procedures for the mixer, shower head and associated pipework.

CLEANING

1. We recommend a strong alkaline non-abrasive detergent/cleaner, preferably with a biocide, to clean the cubicle, followed by a thorough rinse. N.B - Care must be taken when using some of the propriety cleaners being marketed. Some are exothermic when mixed with water, and the excess heat could damage the plumbing.
2. The design of top access bottle trap incorporates a removable dip tube and drain grid for ease of cleaning. Please refer to manufacturers instructions supplied with cubicle. Full access can be gained to the trap by removing the door step.

If you require any further assistance, please contact Taplanes on 01423 771 645